


Rändelschraube zur  
Blendenklemmung /  
Knurled screw for  
iris lock

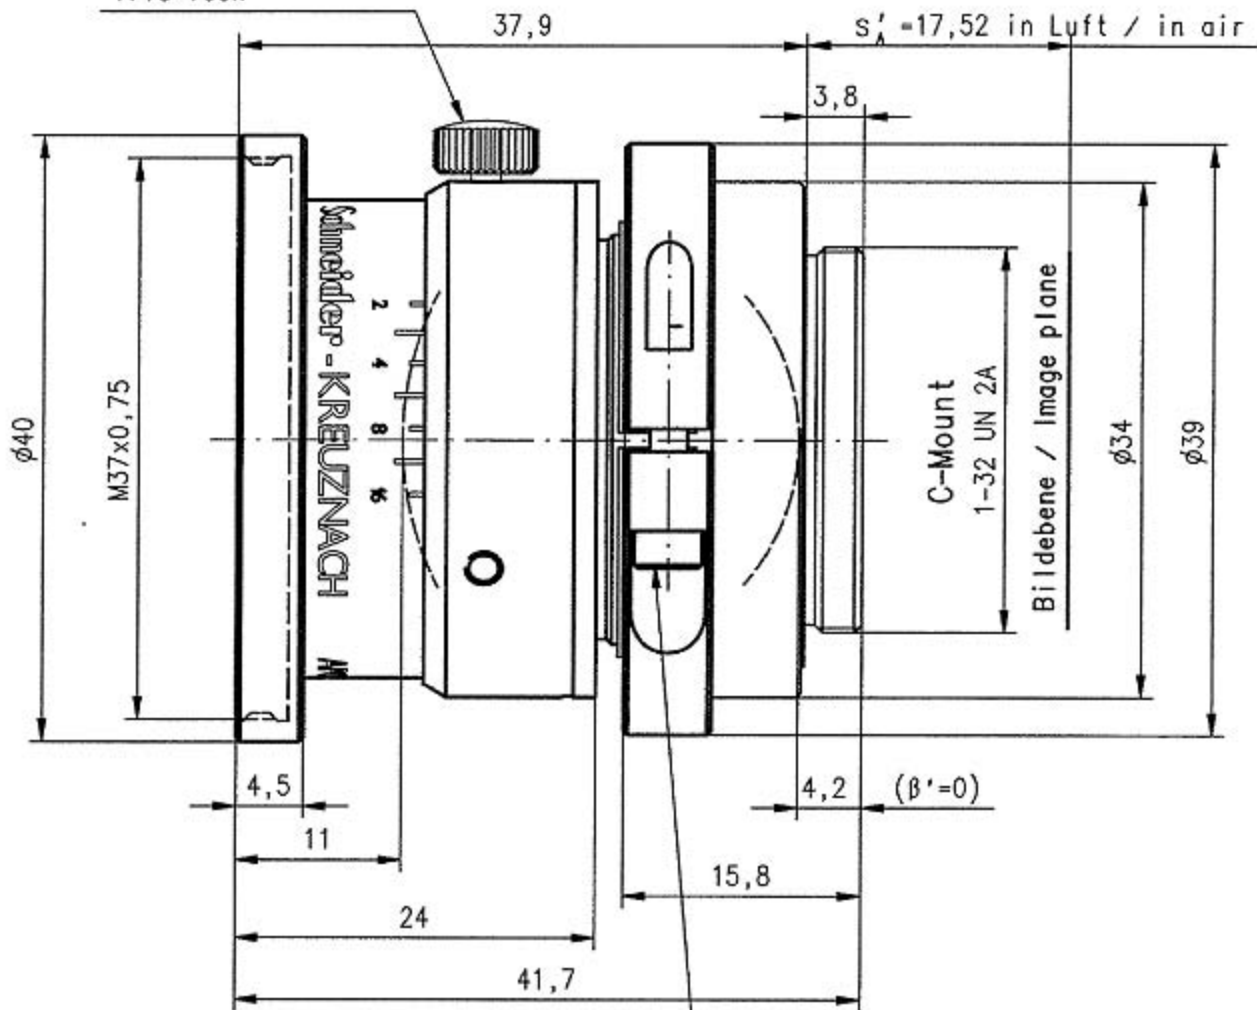

Apo-Xenoplan 2,0/24-2001

Inbusschraube zur Fokusklemmung /  
Allen screw for focus lock